

Service Manual

ORDER NO.
CRT5257

RDS MEDIA CENTER RECEIVER

MVH-150UB_{/XMUW5}

This service manual should be used together with the following manual(s) listed below.
For the parts numbers, adjustments, etc. which are not shown in this manual,
refer to the following manual(s).

Model No.	Order No.	Mech. Module	Remarks
MVH-350BT/XMEW5	CRT5065		MVH-150UI/XMEW5

EXPLODED VIEWS AND PARTS LIST

PACKING(Page 24)

PACKING SECTION PARTS LIST

*: Non spare part

Mark	No.	Description	MVH-150UI/XMEW5	MVH-150UB/XMUW5
	5	Cord Assy	QDP3012	QDP3014
	7	Unit Box	QHG3331	QHG3434
	8	Contain Box	QHL3331	QHL3434
	14-1	Owner's Manual	QRD3133	QRB3325
*	14-2	Warranty Card	CRY1376	Not used

EXTERIOR(Page 26)

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	MVH-150UI/XMEW5	MVH-150UB/XMUW5
	6	Cord Assy	QDP3012	QDP3014
	8	Tuner Amp Unit	QWM3477	QWM3485
	11	Holder	QNC3049	QNC3051
	19	Detachable Grille Assy	QXA3579	QXA3824
	25	Button(SRC, BAND)	QAC3101	QAC3102
	32	Grille Unit	QXA3635	QXA3826
	34	Knob Unit	QXA3670	QXA3673

ELECTRICAL PARTS LIST(Page 44)

Tuner Amp Unit

Circuit Symbol and No.		Part Name	MVH-150UI/XMEW5	MVH-150UB/XMUW5
IC301		IC	PA2030A	PAL011A
IC531		IC	337S3959	Not used
Q251		Chip Transistor	RN1910	Not used
Q531		Transistor	LSAR523UB	Not used
Q951		Transistor	LSAR523UB	Not used
D951		Diode	1SS301	Not used
L951		Chip Coil	BTH1101	Not used
JA251		Pin Jack	CKB1099	CKB1056
JA891		Jack	CKS6437	Not used
R251			RS1/16SS821J	Not used
R252			RS1/16SS821J	Not used
R253			RS1/16SS223J	Not used
R254			RS1/16SS223J	Not used
R531			RS1/16SS473J	Not used
R532			RS1/16SS222J	Not used
R533			RS1/16SS222J	Not used
R534			RS1/16SS272J	Not used
R535			RS1/16SS472J	Not used
R536			RS1/16SS472J	Not used
R537			RS1/16SS101J	Not used
R538			RS1/16SS101J	Not used
R539			Not used	RS1/16SS473J
R540			Not used	RS1/16SS473J
R604			RS1/16SS473J	Not used
R619			Not used	RS1/16SS103J
R891			RS1/16SS102J	Not used
R892			RS1/16SS102J	Not used
R951			RS1/16SS102J	Not used
R952			RS1/16SS223J	Not used
R953			RS1/16SS153J	Not used
C251		4.7 uF	CCG1201	Not used
C252		4.7 uF	CCG1201	Not used
C253			CCSSCH101J50	Not used
C254			CCSSCH101J50	Not used
C319			CCSSCH101J50	Not used
C320			CCSSCK1R0C50	Not used
C321			CCSSCH101J50	Not used
C323			CCSRCH100D50	Not used
C324			CCSRCH100D50	Not used
C325			CCSRCH100D50	Not used
C326			CCSRCH100D50	Not used
C531			CKSSYB104K10	Not used
C532			CKSSYB104K10	Not used
C891			CKSRYB104K16	Not used
C892			CKSRYB104K16	Not used

The mounting positions of the additional parts are described in the circuit diagram and PCB diagram of the parent manual.