

Pioneer

Service Manual

ORDER NO.
CRT5415

RDS MEDIA CENTER RECEIVER

MVH-150UB_{/XINUW5}

This service manual should be used together with the following manual(s) listed below.
For the parts numbers, adjustments, etc. which are not shown in this manual,
refer to the following manual(s).

Model No.	Order No.	Mech. Module	Remarks
MVH-350BT/XMEW5	CRT5065		MVH-150UI/XMEW5

EXPLODED VIEWS AND PARTS LIST

PACKING(Page 24)

PACKING SECTION PARTS LIST

* : Non spare part

Mark	No.	Description	MVH-150UI/XMEW5	MVH-150UB/XINUW5
	5	Cord Assy	QDP3012	QDP3014
	7	Unit Box	QHG3331	QHG3624
	8	Contain Box	QHL3331	QHL3624
	14-1	Owner's Manual	QRD3133	QRB3388
*	14-2	Warranty Card	CRY1376	CRY1330

Owner's Manual

Part No.	Language
QRB3388	English, Russian

EXTERIOR(Page 26)

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	MVH-150UI/XMEW5	MVH-150UB/XINUW5
	6	Cord Assy	QDP3012	QDP3014
	8	Tuner Amp Unit	QWM3477	QWM3485
	11	Holder	QNC3049	QNC3051
	19	Detachable Grille Assy	QXA3579	QXA3824
	25	Button(SRC, BAND)	QAC3101	QAC3102
	32	Grille Unit	QXA3635	QXA3826
	34	Knob Unit	QXA3670	QXA3673

ELECTRICAL PARTS LIST(Page 44)

TUNER AMP UNIT

Circuit Symbol and No.	Part Name	MVH-150UI/XMEW5	MVH-150UB/XINUW5
IC301	IC	PA2032A	PAL012A
IC531	IC	337S3959	Not used
Q251	Chip Transistor	RN1910	Not used
Q531	Transistor	LSAR523UB	Not used
Q951	Transistor	LSAR523UB	Not used
D551	Diode	CMS03	CMS30I30A
D601	Diode	RB751SM-40	Not used
D602	Diode	RB551VM-30	Not used
D871	Diode	RKZ7.5KG(B2)	DZ2J075M0
D941	Diode	HZU7L(C3)	DZ2J075M0
D951	Diode	1SS301	Not used
L951	Chip Coil	BTH1101	Not used
JA251	Pin Jack	CKB1099	CKB1056
JA891	Jack	CKS6437	Not used

Circuit Symbol and No.	Part Name	MVH-150UI/XMEW5	MVH-150UB/XINUW5
R251		RS1/16SS821J	Not used
R252		RS1/16SS821J	Not used
R253		RS1/16SS223J	Not used
R254		RS1/16SS223J	Not used
R531		RS1/16SS473J	Not used
R532		RS1/16SS222J	Not used
R533		RS1/16SS222J	Not used
R534		RS1/16SS272J	Not used
R535		RS1/16SS472J	Not used
R536		RS1/16SS472J	Not used
R537		RS1/16SS101J	Not used
R538		RS1/16SS101J	Not used
R539		Not used	RS1/16SS473J
R540		Not used	RS1/16SS473J
R604		RS1/16SS473J	Not used
R619		Not used	RS1/16SS103J
R891		RS1/16SS102J	Not used
R892		RS1/16SS102J	Not used
R943		RS1/16SS473J	RS1/16SS333J
R944		RS1/4SA102J	RS1/4SA122J
R951		RS1/16SS102J	Not used
R952		RS1/16SS223J	Not used
R953		RS1/16SS153J	Not used
C218	Capacitor	CEVW470M16	XCEVW470M16
C251	4.7 uF	CCG1201	Not used
C252	4.7 uF	CCG1201	Not used
C253		CCSSCH101J50	Not used
C254		CCSSCH101J50	Not used
C317		CEVW100M16	XCEVW100M16
C319		CCSSCH101J50	Not used
C320		CCSSCK1R0C50	Not used
C321		CCSSCH101J50	Not used
C323		CCSRCH100D50	Not used
C324		CCSRCH100D50	Not used
C325		CCSRCH100D50	Not used
C326		CCSRCH100D50	Not used
C531		CKSSYB104K10	Not used
C532		CKSSYB104K10	Not used
C551	Capacitor	CEVW221M16	XCEVW221M16
C891		CKSRYB104K16	Not used
C892		CKSRYB104K16	Not used

The mounting positions of the additional parts are described in the circuit diagram and PCB diagram of the parent manual.